


GROUNDING 3M COLD SHRINK SPLICES ON 28 kV FLAT STRAP CABLE

1. Installation Instructions

Ground per the illustration below. These instructions are to be used in conjunction with 3M QS-III Splice Instructions. Use the information for **tape shield** cable in those instructions when using the splice on **flat strap** cable.

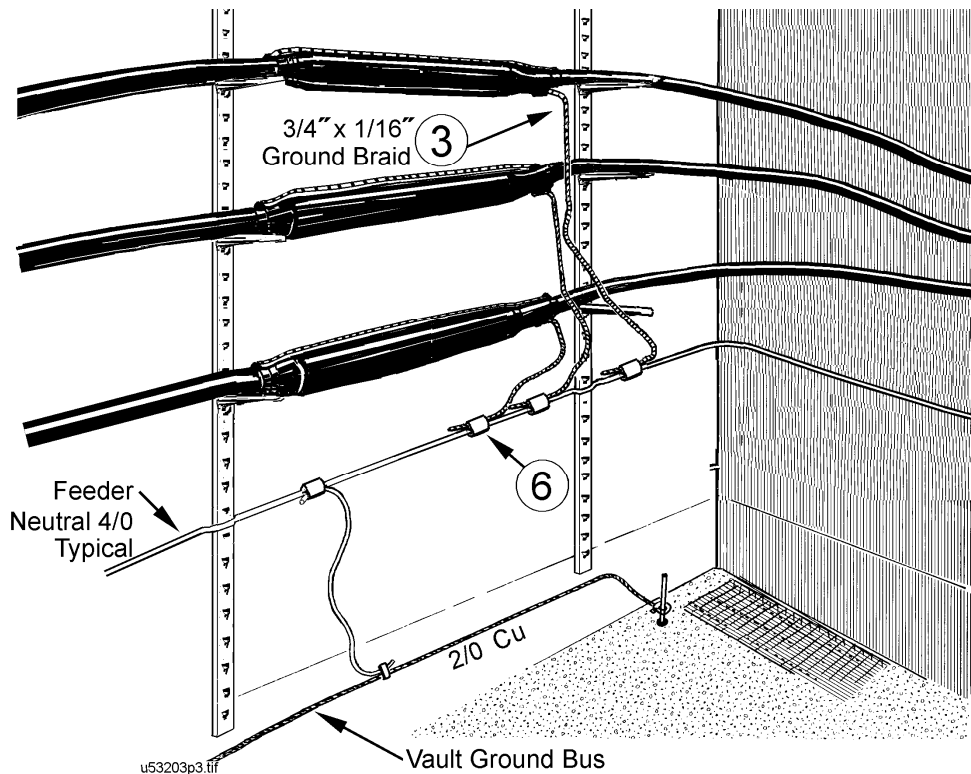

2. Material List

Item	Quantity	Description	Stock No.	Matl. Std.
1	1	SPLICE KIT, cold shrink for 350 and 500 kcmil cable	012131	6871.4
		for 750 and 1000 kcmil cable	012132	
3*	1	BRAID, solder block	—*	—
4*	2 as required	BRAID, tinned Cu, flat, 5/8" X 3/32"	618624	—
6	1	CONNECTOR, Cu Crimpit	677329E to 677333E	6773.5

* Part of the 3M cold shrink splice kit.

STANDARDS COORDINATOR

STANDARDS SUPERVISOR

UNIT DIRECTOR

Goldshield

John Schinner

Hardee Guy