

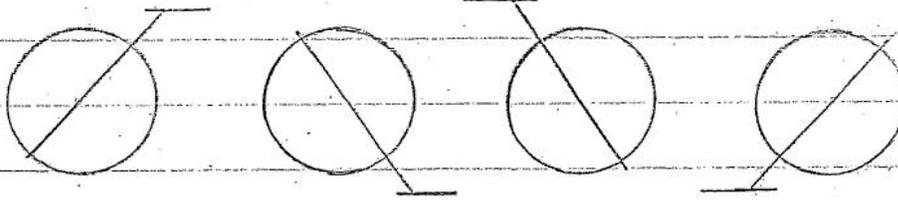
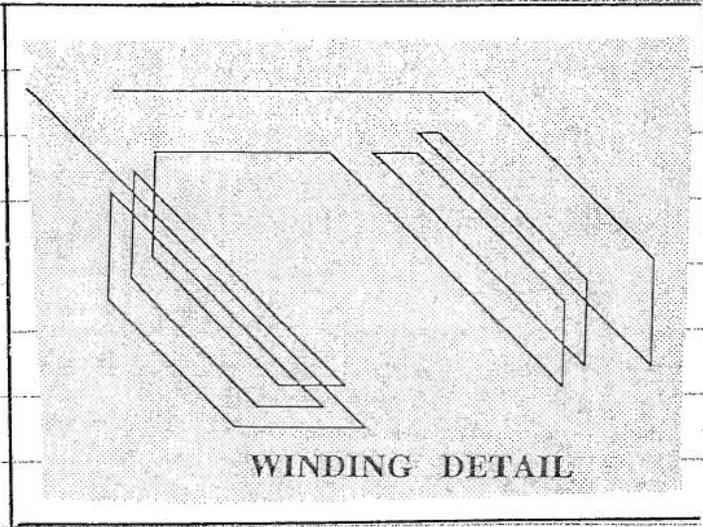
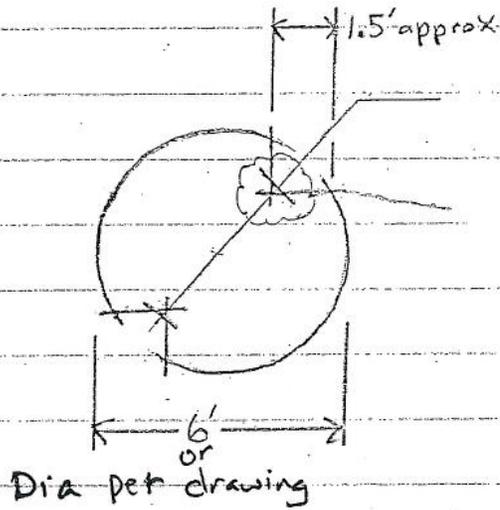
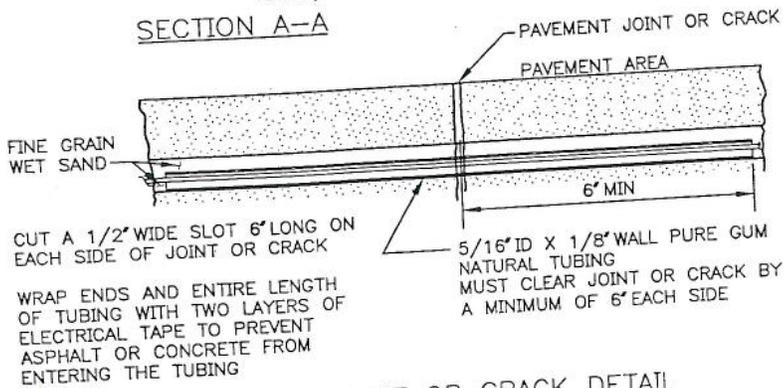
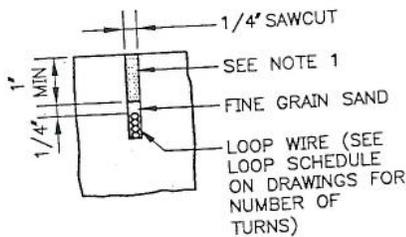


Bicycle loop

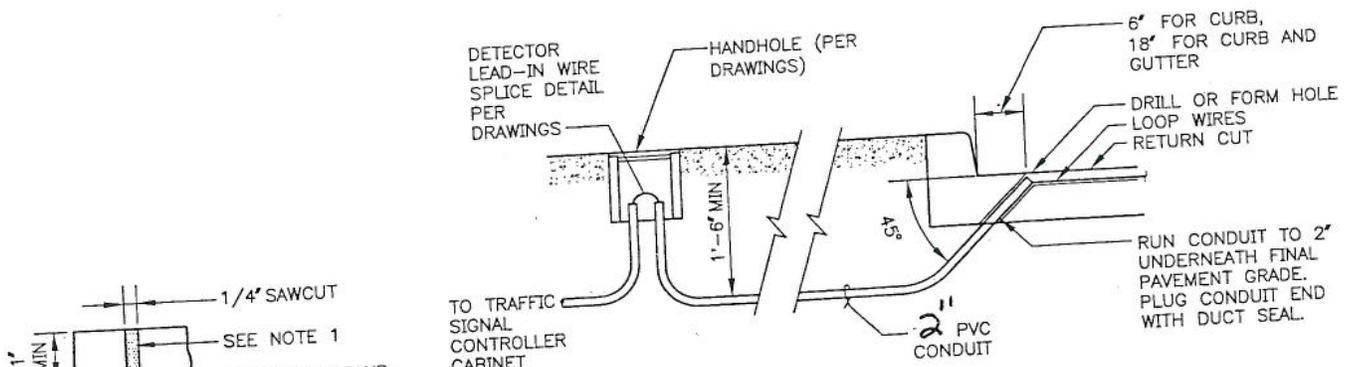

Angle of diagonal dependant on layout requirements

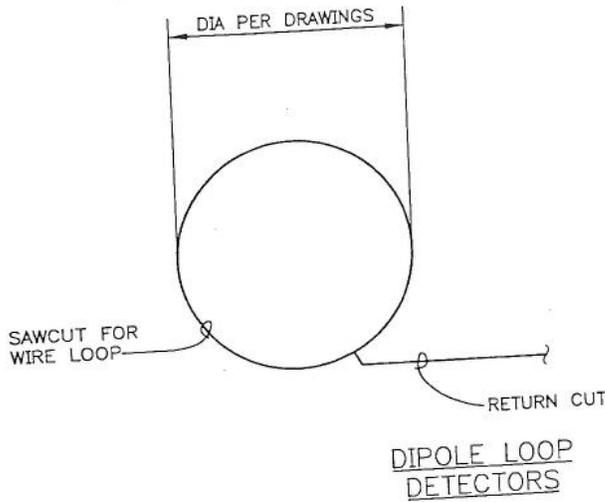

NOTES:

1. FILL CUT AFTER VERTICAL PLACEMENT AND TESTING WITH HOT PAVING GRADE LIQUID ASPHALT ASTM D 312 TYPE III OR QUICK SETTING HIGH STRENGTH GROUT
2. SHARP EDGE TOOLS SHALL NOT BE USED IN PLACING CONDUCTORS IN SAW CUTS
3. EACH PAIR OF LOOP WIRES IN THE RETURN CUT SHALL BE TWISTED A MINIMUM OF 3 TURNS PER FOOT AND MAY SHARE COMMON RETURN CUTS WITH OTHER TWISTED PAIRS
4. TAPE LOOP WIRE A MINIMUM OF 2 TURNS AT EACH CORNER
5. REMOVE SHARP CORNER EDGES IN SAW CUTS WHERE LOOP WIRE WILL BE BENT AROUND
6. PERFORM RESISTANCE AND CONTINUITY TESTS PRIOR TO SEALING LOOP WIRES
7. COIL 5'-0" OF LOOP WIRE IN HANDHOLE
8. *IMSA 51-7 loop wire to be used.*
9. *Splicing only allowed in handholes as per. Stand Plan 530b*

REF STD SPEC SEC 8-31



City of Seattle

NOT TO SCALE

LOOP DETECTORS