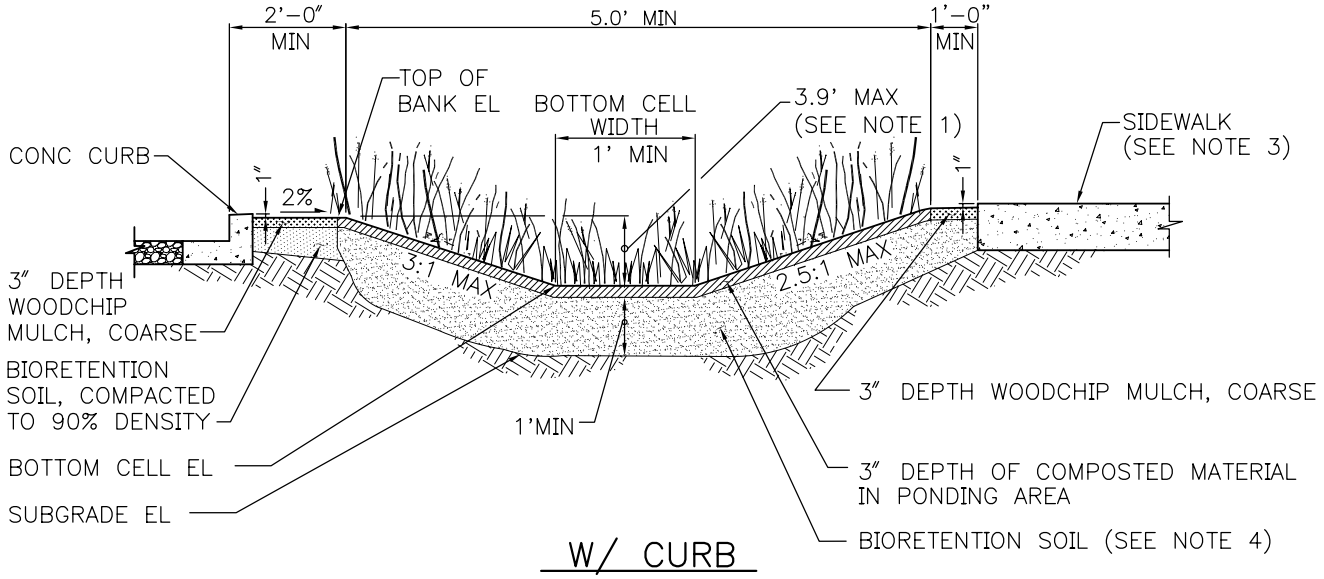

W/ CURB

NTS

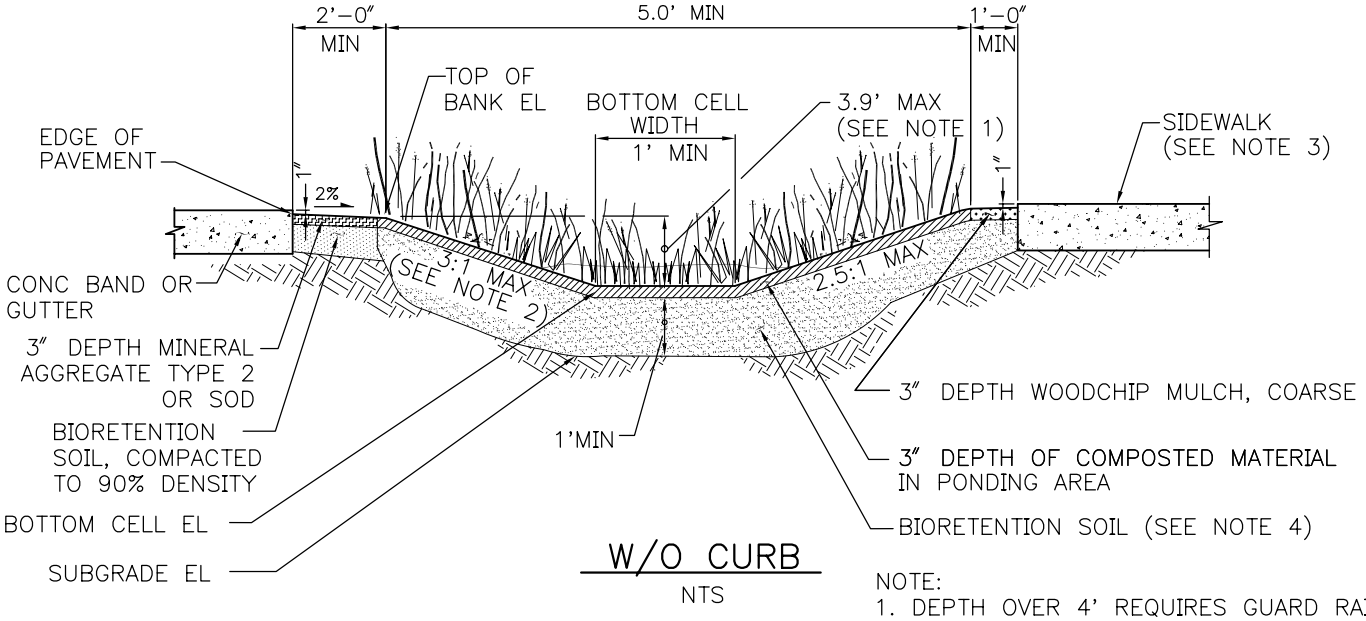

W/O CURB

NTS

NOTE:
1. DEPTH OVER 4' REQUIRES GUARD RAIL.
2. 4:1 MAX WHEN WITHIN 50–FEET OF INTERSECTIONS
3. SIDEWALK ELEVATION MUST BE SET ABOVE OVERFLOW ELEVATIONS.
4. SCARIFY SUBGRADE 3" MIN BEFORE BIORETENTION SOIL INSTALLATION.

APPLICATION OF THESE DETAILS REQUIRE APPROVAL FROM SDOT AND SPU.

SEATTLE RIGHT-OF-WAY manual

BIORETENTION, BIOFILTRATION CELL

FIGURE

6–15

JANUARY 2010

P:\Utility\c333206_std_details\plot files\15 C333206_P15.dwg
HwangC Feb–07–11 10:02am Xrefs: | TitleBlock–letter | NDS_Bioretention_Swale |