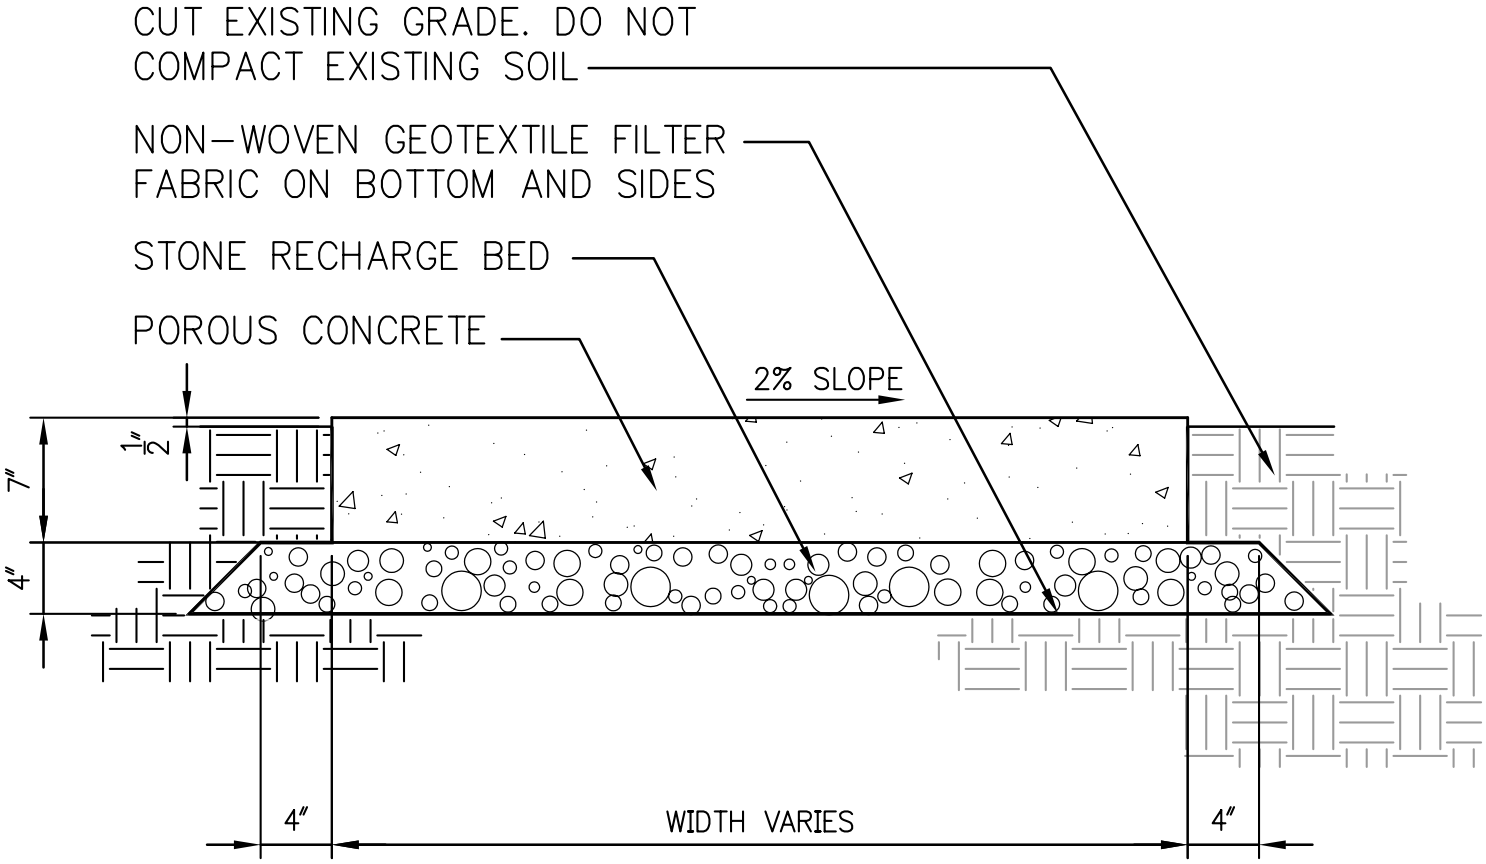

NOTES:

1. EXTEND FILTER FABRIC OVER EDGE DURING CONSTRUCTION TO PREVENT SILTATION OF BED. FOLLOWING SOIL STABILIZATION, TRIM FABRIC AT EDGE.
2. DO NOT COMPACT OR ALLOW HEAVY EQUIPMENT TO TRAVERSE BED BOTTOM AREA.
3. SLOPE SUBBASE AT 2% IN DIRECTION OF SURFACE FLOW.

City of Seattle **Department of Parks & Recreation**	**POROUS CONCRETE PAVING DETAIL** **STD. DETAIL NO. 32 13 13.16**