

VIII. DETOURS AND STREET CLOSURES

Several elements, in addition to those indicated in Chapter I, are involved whenever it is deemed necessary before or during the course of a project to close an existing street and create a detour.

A. Permission and Notification

Notification to close a street shall be given to and permission obtained from the Seattle Department of Transportation (SDOT) Traffic Management Division, as outlined in Chapter II of this Manual. The Contractor or Utility shall submit detour schedules and diagrams showing the steps required to maintain the detour during each phase of construction and showing the type, number and placement of all traffic control equipment. The submittal shall include a tentative schedule indicating when specific signs, barricades and pavement markings will be activated and deactivated.

B. Detour Requirements

All detours shall meet the following requirements in addition to any specified by the Traffic Engineer as being necessary for a particular project:

- 1) The detour shall be as simple and direct as possible.
- 2) No turns shall be used on the detour other than those required to leave or enter the closed street or the parallel detour route.
- 3) Streets less than 36' in width shall be used to detour only one direction of traffic unless parking on one or more sides is restricted.
- 4) All detour routes shall be protected by the proper temporary traffic control signs.
- 5) When detouring a multi lane street on a detour route less than four lanes in width, parking shall be prohibited on the detour route.
- 6) The detour route shall be clearly marked where it intersects other streets so that motorists will not turn prematurely into the construction area or closed portion of the street.
- 7) Arterial streets shall be detoured to arterial streets unless otherwise approved by the Traffic Engineer.
- 8) Advance warning signs to detours shall be used on arterial streets.
- 9) All temporary traffic control equipment used shall conform in design and placement to requirements set forth in this Manual.
- 10) All temporary traffic control equipment used shall be supplied and maintained by the Contractor and adjusted as work progresses.



In addition, the Contractor shall be responsible for:

1. Posting signs and barricades advising of the street closure at the nearest intersections away from the closed portion of the street and on all cross streets in order to minimize unnecessary backing, turning around and maneuvering. Normally, such street closings should not exceed two blocks in length at any one time.
2. Providing and maintaining access for local residents as much as conditions permit.
3. Maintaining access for all emergency vehicles, fire hydrants and alarm boxes along the closed route at all times.

C. Requirements Within Streets Closed to Through Traffic


When construction work is being conducted on a street that is closed to all but local traffic, the requirements for signing, particularly advance signing, channelizing devices, lighting, and work area protection may differ from those indicated in this Manual.

Generally, the following guidelines should be adhered to; however, each situation should be evaluated on the basis of traffic volume and speed, familiarity of motorists with the roadway, and sight distance.

1. All open excavations, ditches, spoil banks, etc., within or adjacent to the right of way shall be properly marked with barricades. Also, obstructions such as poles, curbing, etc., which due to the construction are in a position where they could be struck by a vehicle or bicyclist should be properly identified by barricades, drums, etc.
2. The path of the vehicle through the construction area should be properly identified by channelizing devices especially where the route has been altered or existing paint striping or channelization has been obscured or removed due to the construction activities. This is especially important at night.
3. Where equipment is working in the traveled way during the daytime, advance signing is generally not necessary nor is delineation of the extent indicated in the illustrations. Generally, traffic cones or barricades outlining the immediate work area are sufficient to guide the motorists around the obstructions.
4. Where one lane must be used for two directions of travel a flagger shall be used. Where flaggers are deemed necessary, conformance with requirements discussed previously shall be adhered to. Situations as stated above which require flagger control shall be allowed during daytime only. At night, such areas shall be clearly marked to allow two lanes of traffic.



5. All signs, channelizing devices, and other equipment used for traffic control at night shall be properly reflectorized or provided with warning lights as indicated previously in this Manual.
6. Where equipment is intermittently backing into the traveled way, flaggers are not generally needed provided that traffic volumes are light, speeds are low and adequate sight distance is available to allow a vehicle to stop safely if necessary.

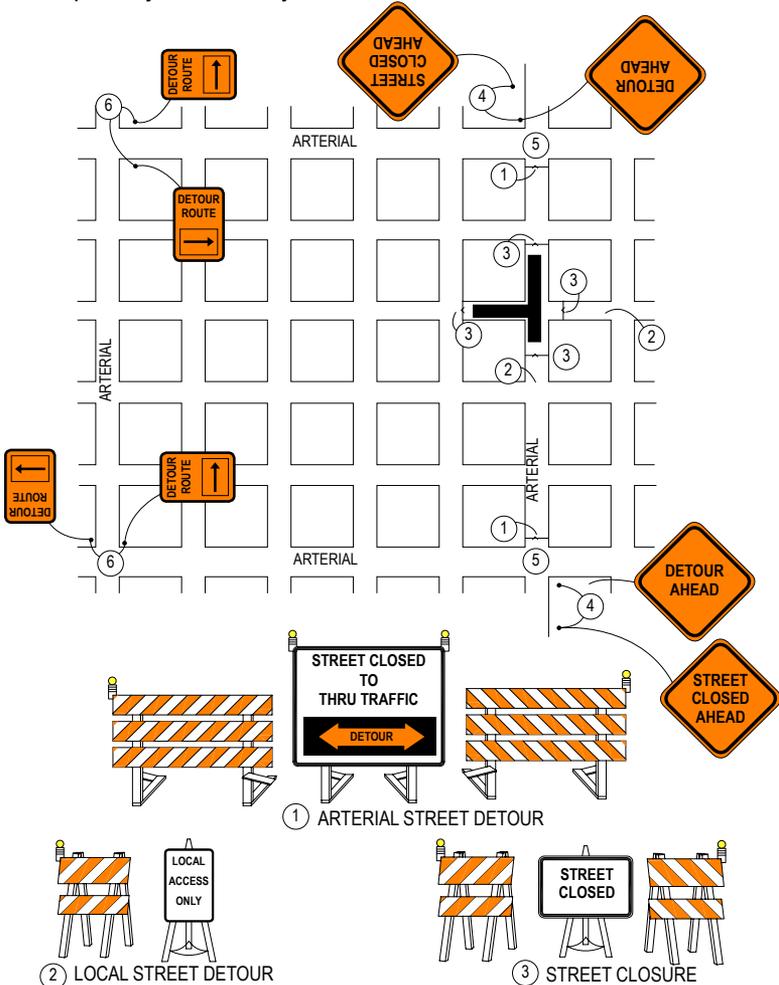

- ④ ADVANCE WARNING SIGNS SHALL BE USED ON ALL ARTERIAL STREETS
- ⑤ TURN MOVEMENT RESTRICTIONS SHALL BE USED AS DIRECTED BY TRAFFIC ENGINEER
- ⑥ DETOUR GUIDE SIGNING TO NEXT ARTERIAL STREET SHALL BE DESIGNED BY TRAFFIC ENGINEER

FULL ROADWAY CLOSURE
TYPICAL DETOUR PLAN

(Figure VIII - 1)



